



Operating Instructions Manual

Stud Remover & Installation Sets

SAE: 82-222


Metric: 82-223



Read through this Operating Instructions Manual carefully before using the product. Protect yourself and others by observing all safety information, warnings, and cautions. Failure to comply with instructions could result in personal injury and/or damage to product or property. Please retain instructions for future reference.



Stud Installation Instructions:

- 1) Screw the stud into the installation tool until it bottoms out onto the steel ball.
- 2) Tighten the grub screw using the included hex key while holding the installation tool with a wrench.
- 3) Thread the stud into the threaded hole by hand.
- 4) Tighten the stud using a wrench on the installation tool.
- 5) Remove the installation tool by loosening the grub screw and unscrewing the tool.

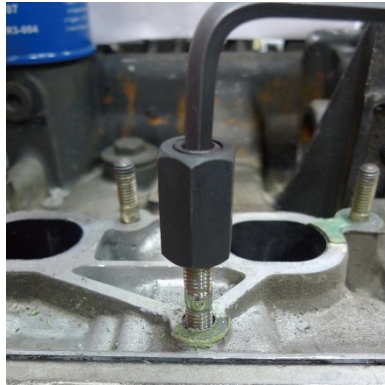

Stud Removal Instructions:

- 1) Screw both parts A & B onto the stud and lock them together two wrenches by screwing them into each other.
- 2) Remove the stud by using a wrench on piece A.
- 3) To remove the tool from the stud, simply loosen both pieces by unscrewing them with two wrenches.

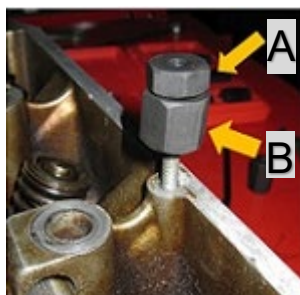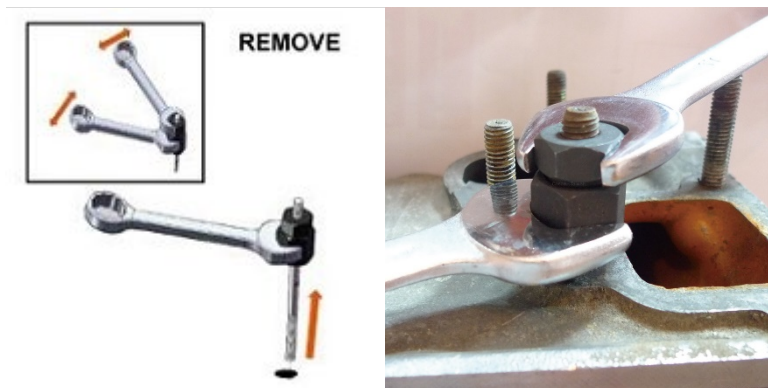

SAFETY PRECAUTIONS:

Read the owner's manual before use. Wear safety glasses when using this tool.

WARNING: Cancer and Reproductive Harm –
www.p65warnings.ca.gov.

LIMITED WARRANTY:

Kimball Midwest warrants to the original buyer ("Buyer") all parts and accessories purchased by it from Kimball Midwest against defects in material or workmanship.

Kimball Midwest will repair or replace, at no charge to the buyer, this tool which, after examination by Kimball Midwest, is determined to be defective within a period of 1 year from receipt.

Coverage under this warranty will be provided only if the defective tool has been submitted to Kimball Midwest for inspection.

This warranty does not cover any damage to this tool due to alteration, modification, improper installation, accident, post-installation misuse, abuse, negligence, inadequate maintenance, or malfunction of associated parts or equipment not supplied by Kimball Midwest.

This warranty is in lieu of any other warranty, expressed or implied, including any warranty of merchantability or fitness for a particular purpose. Replacement or repair as provided under this warranty is the exclusive remedy of the buyer. Kimball Midwest shall not be liable for any incidental or consequential damages resulting from breach of this warranty. Kimball Midwest neither assumes, nor authorizes any person to assume for it, any other liability in connection with the sale of its products.

If this Kimball Midwest Product proves defective in material or workmanship within one year after purchase, contact the Kimball Midwest Quality Assurance Department at All-QualityAssurance@kimballmidwest.com

Manufactured For:
Kimball Midwest
4800 Roberts Road
Columbus, OH 43228
1-800-233-1294
www.kimballmidwest.com